ID3 - Series: B

## SPIR STAR

SPIR STAR 3/4-2100

## **Applications**

Waterblast: Heat exchanger tube cleaning, ultra high-pressure

> waterjet cutting and hydro demolition (cutting and demolition of armoured concrete, pipelines, paper or

**Hydraulics:** Pressure test equipment (valves, tooling and control

> panels), hydraulic tools (instrumentation packages for gauges, control of service equipment, hydraulic jacks,


hydraulic tools)

## **Technical Information**

**Inner Core:** Polyoxymethylene (POM) **Pressure Support:** 4 layers of high-tensile steel wire

**Outer Cover:** Polyamide (PA)

Color: Silver

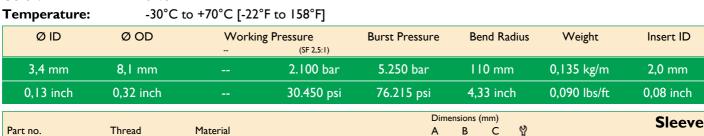

			Dimensions (mm)				Sleeve
Part no.	Thread	Material	Α	В	Ċ	암	Sieeve
Sleeve							
10340102	-	Steel	12,1	43	-	-	
							4

				Din	nensions	(mm)	Insert	
Part no.	Thread	Material	Nut	Α	В	С	암	Ilisert
HP fitting								
40340202B	1/4"x28UNF LH	Steel	-	2	79,5	14	-	<u> </u>
40340224B	3/8"x24UNF LH	Stainless stee	l -	2	84	20	-	4 B
Universal fen	nale swivel 24°/60°							
20340112B	M12x1,5	Steel	50340111	2	57	-	17	

34008.2100

SPIR STAR®

ID3 - Series: B

Part no.	Thread	Material	Nut	Dime A	ensions ( B	(mm)	암	Insert
Type M femal	le swivel							
20340602B	9/16"x18UNF	Steel	50540601, 50540605	2	59	-	19	S)

				Dimensions (mm)				Swivel nut	
Part no.	Thread	Material	Relief bores	Α	I	3	С	암	Switternac
Swivel nut									
50540601	9/16"×18UNF	Steel	l radial	9,2	I	8	14	19	
50340111	MI2xI.5MI2xI,5	Steel	l radial	8,2	I	6	9	17	4
50540605	9/16"×18UNF	AISI 316	l radial	9,2	I	8	14	19	

Part no.	Thread	Material	Dime A	ensions B	(mm) C	Tylbe cleaning accessories
Stop sleeve						
I.84103401B	-	Steel -	12,1	44	-	50 +5 B
Marking ring						
1.851012.5	-	AISI 316 -	10,1	10	-	- 500 *50 B

Production related variations of the burst pressure of up to 5 % are possible. Other colors upon request.

The safety factors between the burst pressure and the working pressure as well as the test pressure depend on the operating conditions. For gaseous media the outer cover is to be pinpricked. Regarding the safety factor for gaseous media please contact your local SPIR STAR® assembling center.

The indicated working pressure refers to the hose only. Depending on the used fitting the permitted working pressure of a hose assembly may be less.

\*) Blast-Pro® fittings may only be used for tube cleaning operations inside the tube. They have not been designed for the use outside of tubes.

We reserve our rights for technical changes without notice. Subject to printing errors.